

## CA-32 & CA-32F

### 1. General Instructions

#### CA-32

 
- \* A professional, user friendly DMX 4ch.controller for colorimixing.
- \* Equipped with 9 different hold-color buttons for instant access of colors.
- \* Comes with 32 spectrum mix colors, color fade, and 12 different chase patterns. Providing the richest changing colors for the show.
- \* Speed and dimmer adjustable for both color fade and chase.
- \* Sound activated function is available.
- \* Full on and Blackout functions.
- \* Power supply: DC 9V 300mA Min.
- \* Size:210X140X46mm
- \* Weight:0.93kg



#### Function Instructions :

Blackout	Blackout the fixture
Full On	All lighting effect at once
Sound	Use to receive audio signal for sound activated
Hold	Press the button for select color on Red / Orange / Yellow / Green / Cyan / Blue / Purple / Magenta / White
Chase	Press the button for select 12 chase patterns form Chase slider.
Spectrum Mix	Press the button for select 32 spectrum mix colors form Spectrum Mix slider
Chase Slider	To choose chase patterns on Standard chase / Bright chase / Mood chase / spectrum randow chase / Spectrum sequence chase / Dynamic chase / Red-Green+Blue / Green-Red+Blue / Blue-Red / Yellow-Blue / Red-Green / Yellow-Green
Spectrum Mix Slider	Use to control 32 spectrum mixcolor
Speed Slider	Use to adujest chase speed within the range of 0.1 second to 2.5 seconds
Fade Time Slider	Use to adujest fade time. Fade time is amount of time it take for one color to fadfe in or fade out
Master Slider	Use to dimmer the fixture


#### Rear view:

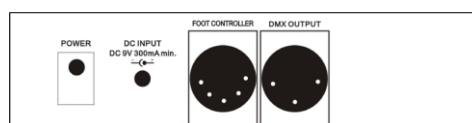


- |                 |  |
|-----------------|--|
| Power Switch    | Turn On/Off the power.                         |
| DC Input        | DC 9V, 300mA min.                              |
| Foot controller | Used to connect the CA-32F.                    |
| DMX Output      | This connector sends DMX value to the fixture. |

## CA-32F

 - \* Colormix Foot controller is an extended controller of Colormix.
- \* To be liked with Colormix. Add a switch to change the control between Colormix and Colormix Foot Controller.
- \* Mode i.) Blackout (LED on)
  - ii.) Hold Color(LED off)
  - iii.) Chase (LED blinking)-Stamp on the button over 2 seconds for chase
- \* Up and Down buttons:To select the hold colors and chase patterns.
- \* Full on:Stamp the button for full on.
- \* Including 10m-5pin XLR cable.
- \* Size:305X174X44mm
- \* Weight:1.27kg

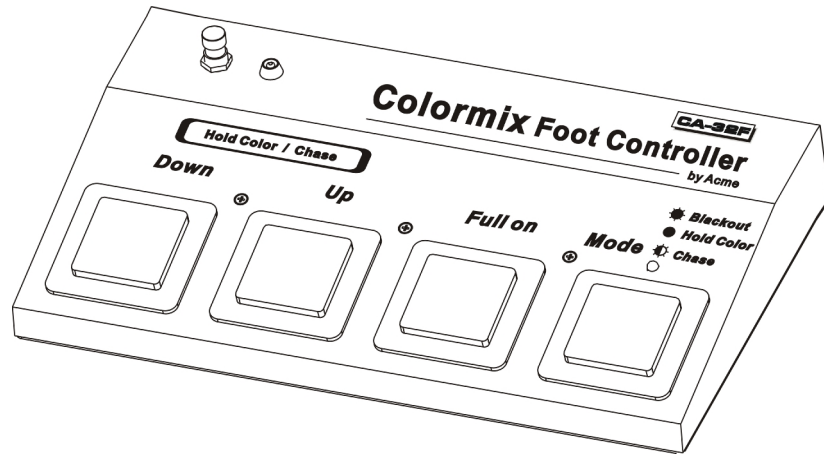


Rear view:

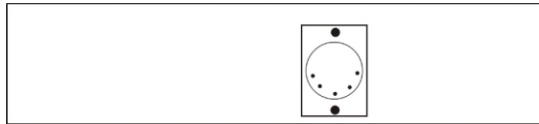 

This connector is used to link CA32 to control the unit, please use 5 pin XLR cable.

## 2. How To Control The Unit

 Set iColor master unit's dipswitch 10 off for DMX control. When the Master unit's dipswitch 10 is on, ( slave units dipswitch 10 always off ), iColors will automatically switch between DMX function and built-in stand alone programs, triggered by music Please refer to the following diagram to link your iColor 3 / iColor 4 together with the controllers

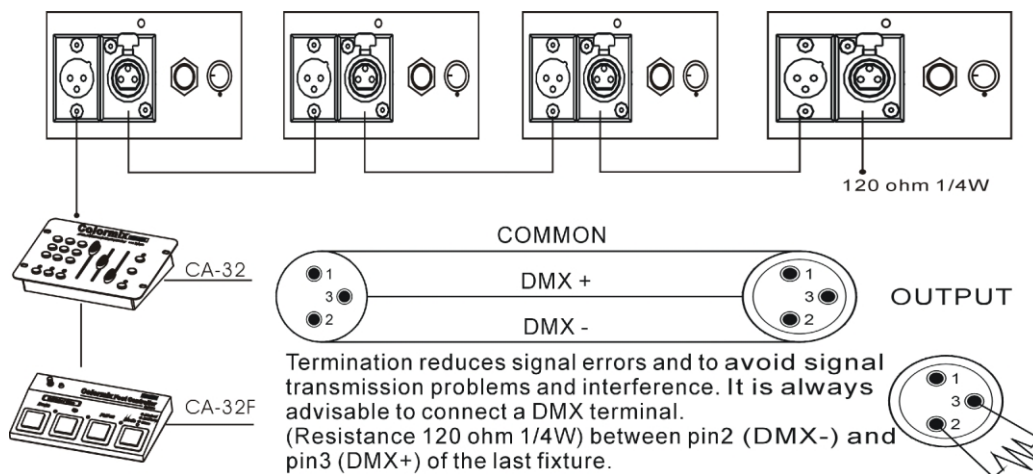

Широкий ассортимент оборудования АСМЕ  
на [www.maxlight.ru](http://www.maxlight.ru)